

minitools



- **SEPDISP66V4**
- **SEPDISP66V9**
- **SEPDISP66V12**
- **SEPDISP66V13**

Installation instructions




Ver. 1.1

www.minitools.com





ATTENTION: THESE INSTRUCTIONS ARE VALID ONLY FOR SEPDISP66V4, SEPDISP66V9, SEPDISP66V12 AND SEPDISP66V13 DISPLAYS

1

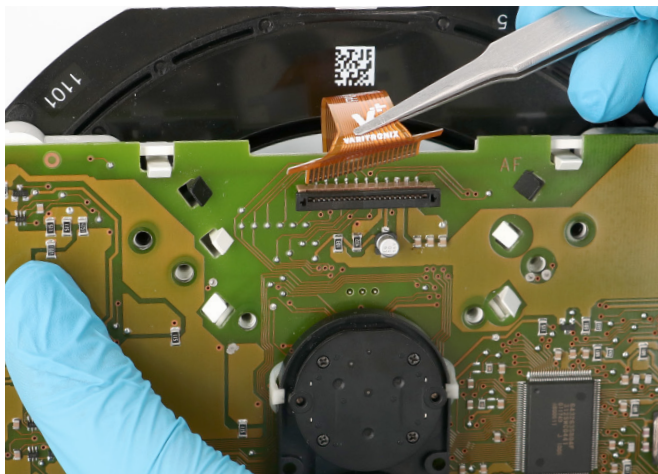



Disassemble the instrument cluster and remove the faulty display.

2

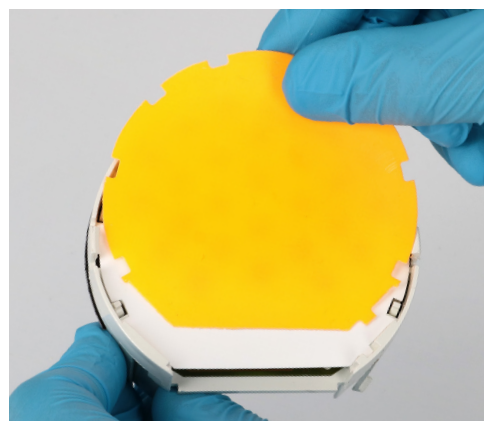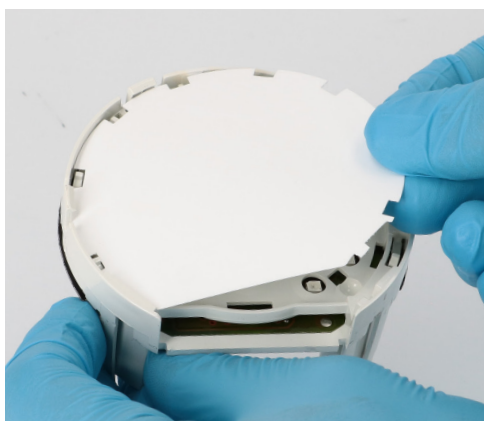

Place the white backlight diffuser supplied with the Minitools display, underneath the orange one.

3

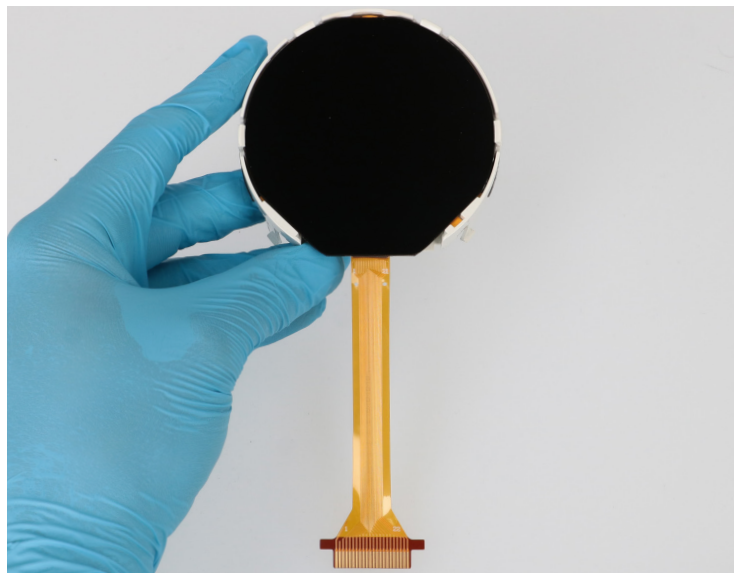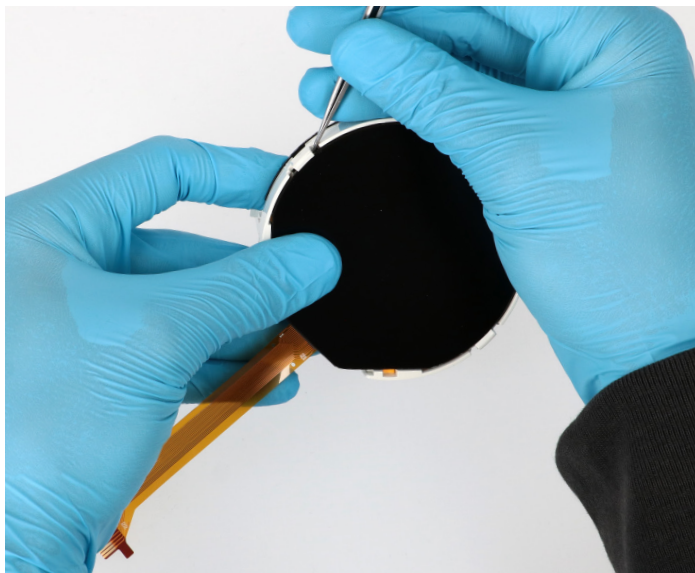

Install the Minitools display.